

**Auto-Recaller**



<b>Function</b>	When Plug placed on Sensor box/or on the Parking Sensor is picked up for measurement it will automatically display the reading of the related plug.
<b>Input Channels</b>	4
<b>Resolution</b>	5µm/1µm/0.5µm/0.1µm
<b>Units</b>	mm, inch
<b>Setup</b>	4
<b>Measurement Modes</b>	Current, Min, Max, Differential
<b>Modes</b>	ID/OD
<b>Display</b>	Tri colour
<b>Indications</b>	Reject, Ok, Rework
<b>User Interface</b>	1 Line 7 Digit seven segment display
<b>PC Interface</b>	RS-232
<b>Data transmission</b>	Auto/ Manual
<b>Outputs</b>	3 open collector outputs
<b>Inputs</b>	1 open collector input
<b>Footswitch interface</b>	Available